



| Ref. N. | Description |
|---------|---------------------------------|
| 10 00 | Pump Casing |
| 10 01 | Pump fixing plate |
| 10 02 | Draining and priming cap |
| 10 03 | Tie bolt |
| 10 04 | Kit nuts and washers |
| 20 00 | Outer case |
| 20 01 | Mechanical seal housing |
| 20 02 | Motor flange |
| 20 03 | Motor bracket |
| 20 04 | Coupling guard |
| 20 05 | Filling plug |
| 20 06 | Kit circlip and bearing |
| 20 07 | Kit coupling washers and screws |
| 20 08 | Coupling |
| 20 09 | Kit motor screws |

| Ref. N. | Description |
|---------|-----------------------------------------|
| 30 00 | Pump shaft |
| 30 01 | Kit mechanical seal |
| 30 02 | Kit screws, nuts and washers |
| 30 03 | Kit o-ring (4 pcs) |
| 40 00 | Stage housing and diffuser |
| 40 01 | Stage centering outlet |
| 40 02 | Floating neck ring assembly |
| 40 03 | Initial stage housing |
| 40 04 | Last stage with diffuser |
| 40 05 | Stage centering inlet |
| 40 06 | Stage housing and diffuser with bearing |
| 50 00 | Impeller |
| 50 01 | Impeller spacers (2 pcs) |
| 50 02 | Intermediary sleeve |
| 50 03 | Intermediary sleeve spacers (2 pcs) |

00114013 07/2008